

# Using the Android Driver App Driver Assign

Link: <https://help.gpsinsight.com/docs/about-gps-insight-driver-android-app/using-the-android-driver-app-driver-assign/> Last Updated: February 13th, 2019

The Driver Assign feature allows drivers to assign/unassign themselves to/from a vehicle and view assign/unassign history from their **Android mobile devices**.

## Assigning to a Vehicle

Upon login to the App, the Vehicle Assignment screen displays.

### ► How to assign yourself to a vehicle:





**Note.** A list of vehicle IDs will not appear if this is the first time you have logged in to the App or you have not yet assigned any vehicles previously.

1. Assign a vehicle using one of the following options:

- **1-** Enter the vehicle ID (associated ID in the Portal) in the text field.
- **2-** Tap on a vehicle ID from a list of vehicles that you have assigned yourself to previously using the Driver App.

# Using the Android Driver App Driver Assign

Link: <https://help.gpsinsight.com/docs/about-gps-insight-driver-android-app/using-the-android-driver-app-driver-assign/> Last Updated: February 13th, 2019

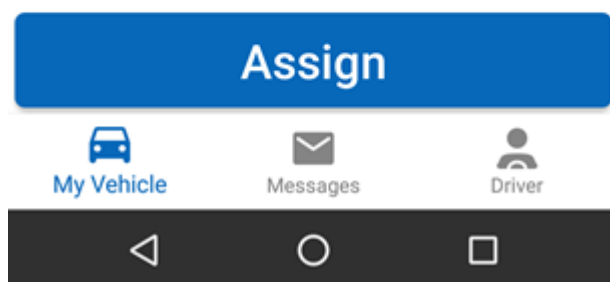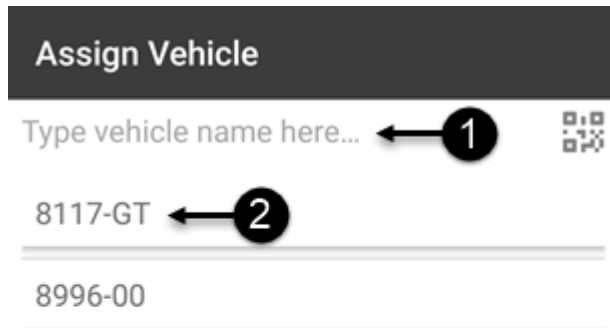

2. If you have entered a vehicle ID in the text field (Option 1), tap **Assign**.


You are now assigned to the vehicle.

The Driver App displays:

- **1-** Vehicle ID, **DVIR** status, and vehicle information
- **2-** DVIR details from the last submitted DVIR on the vehicle status


# Using the Android Driver App Driver Assign

Link: <https://help.gpsinsight.com/docs/about-gps-insight-driver-android-app/using-the-android-driver-app-driver-assign/> Last Updated: February 13th, 2019

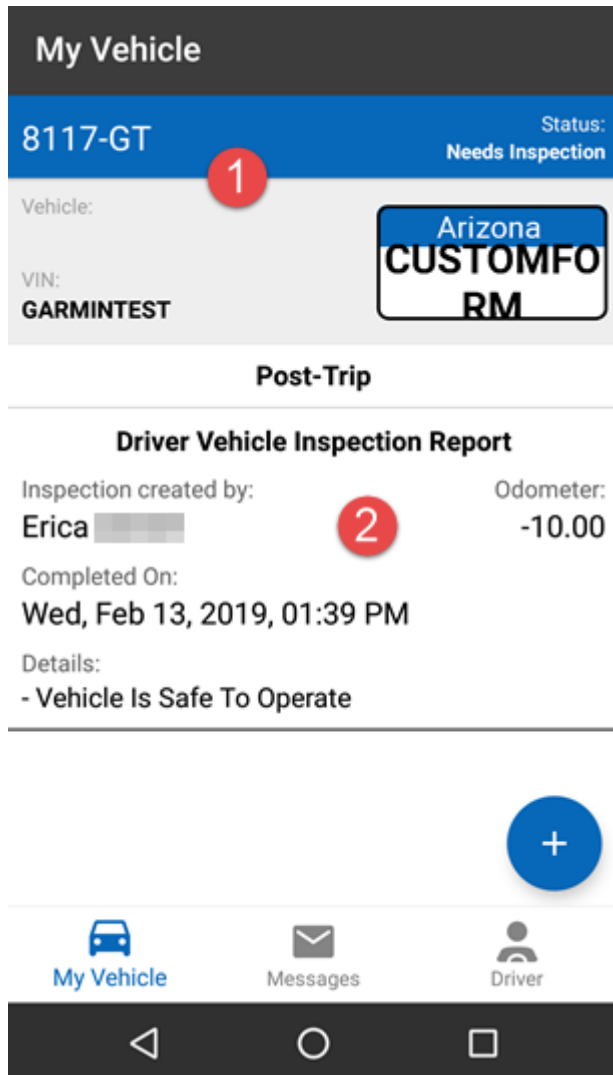

## Viewing Assign/Unassign History

### ► How to view assign/unassign history:

1. Tap the **Driver** icon (  ) at the bottom right corner of the screen.


The Driver Info page appears displaying:

- **1-** Your name and vehicle ID.
- **2-** Driver totals for Miles, Hours (Hours:Minutes), Trips, MPG from the last 7 days while assigned to a vehicle.

# Using the Android Driver App Driver Assign

Link: <https://help.gpsinsight.com/docs/about-gps-insight-driver-android-app/using-the-android-driver-app-driver-assign/> Last Updated: February 13th, 2019


- **3-** Assign/Unassign history for the last 10 days, includes vehicle ID, date and time stamps.

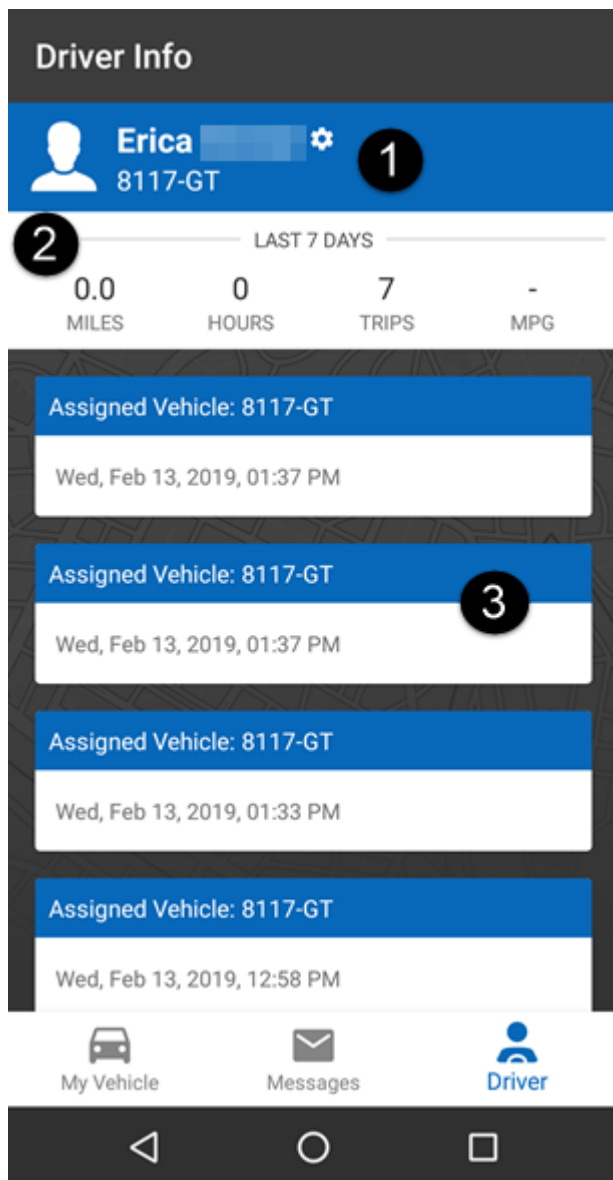

2. Scroll down to view all history, if applicable.

# Using the Android Driver App Driver Assign


Link: <https://help.gpsinsight.com/docs/about-gps-insight-driver-android-app/using-the-android-driver-app-driver-assign/> Last Updated: February 13th, 2019

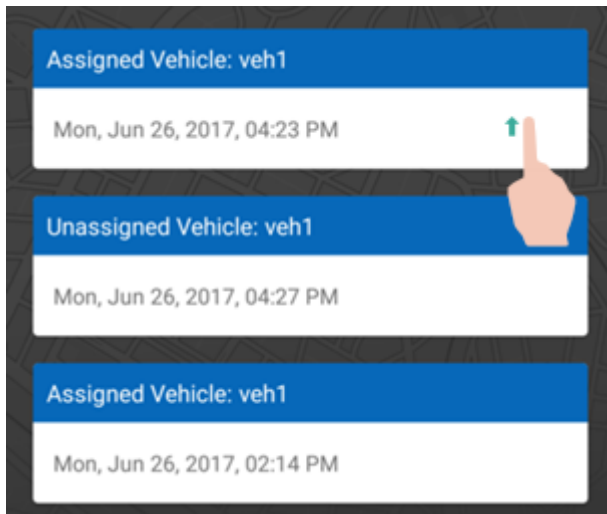

## Unassigning from a Vehicle




**Note.** You must submit a Post-Trip DVIR before unassigning from a vehicle if you submitted a Pre-Trip DVIR and deemed the vehicle “Safe to Operate.” You will receive the following message if a Post-Trip DVIR is not performed and you attempt to unassign yourself from a vehicle in this situation:

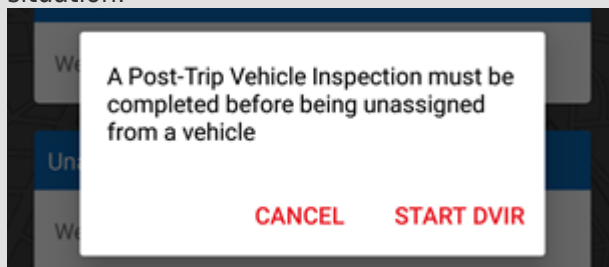

Tap **Cancel** or **Start DVIR** and submit a Post-Trip DVIR.

### ► How to unassign yourself from a vehicle:

1. From the Driver Info Screen, tap on the Driver Name/Vehicle ID bar.

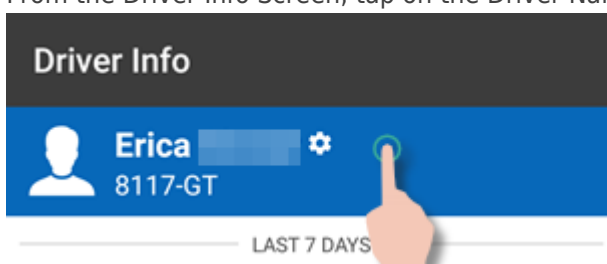

# Using the Android Driver App Driver Assign

Link: <https://help.gpsinsight.com/docs/about-gps-insight-driver-android-app/using-the-android-driver-app-driver-assign/> Last Updated: February 13th, 2019

A prompt appears with two options: “Unassign Vehicle” or “Logout.”

**UNASSIGN VEHICLE**

**LOGOUT**

2. Tap **Unassign Vehicle**.

You are now unassigned from the vehicle.