


When you click on a vehicle/driver (if assigned) from the map or use the Search Field to locate a vehicle, the Vehicle Card for the selected vehicle/driver displays, which shows you the Vehicle ID or name, the driver (if associated/assigned), address of last reported location, details (e.g., vehicle, status, driver, landmark, odometer, and more), attributes (if applicable) and street view of last reported location. Additionally, you can follow a vehicle, isolate a vehicle, create a landmark, send a dispatch, and view trip history directly from the card.

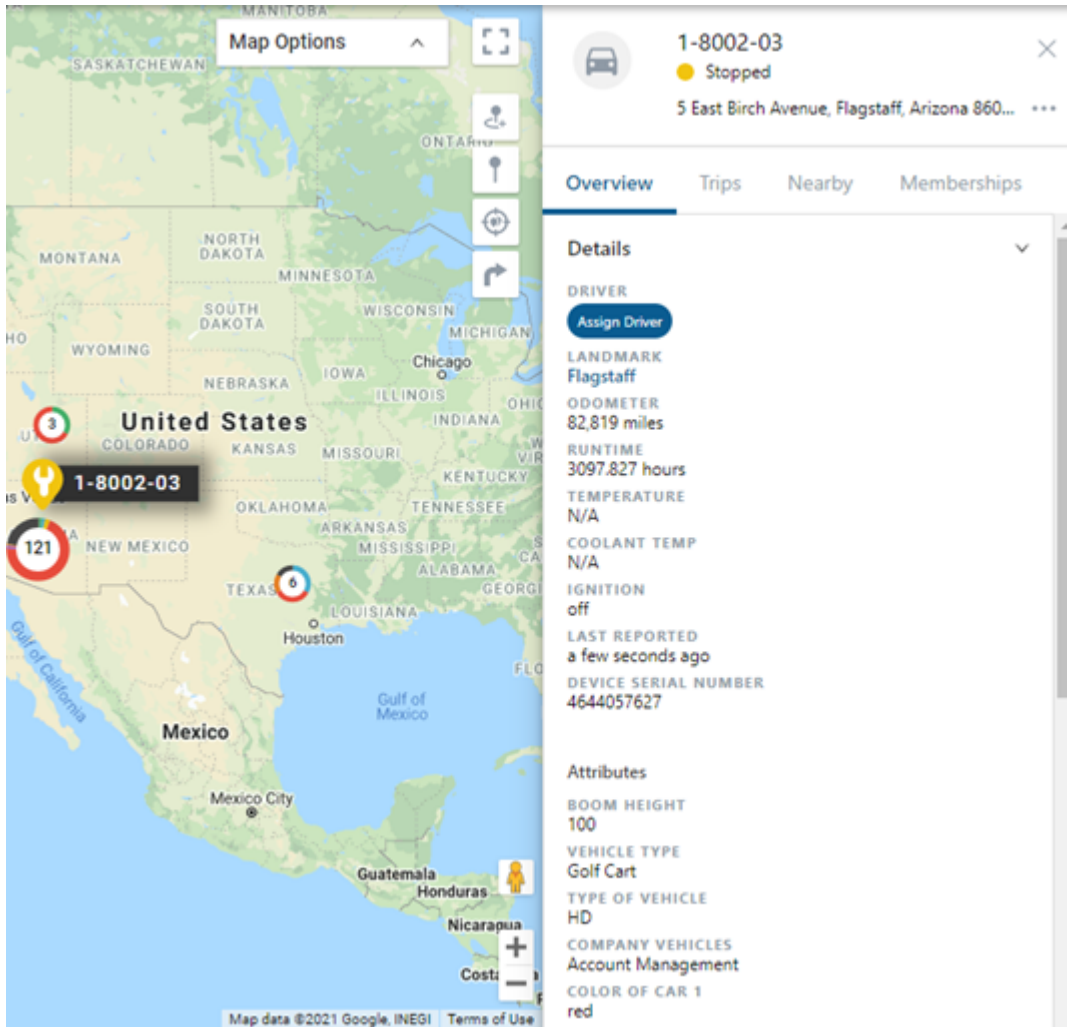


Using the Vehicle Card Header

Using the ellipses button (***) from the Header, you can perform multiple tasks, including:

- Following a vehicle
- Isolating a vehicle
- Creating a landmark
- **Sending a dispatch**
- **Viewing history**
- Copying an Address


Link: <https://help.gpsinsight.com/docs/about-the-map-page/available-map-cards/using-the-vehicle-card/> Last Updated: May 9th, 2019

- Copying Lat/Long
- Open location in Google Maps

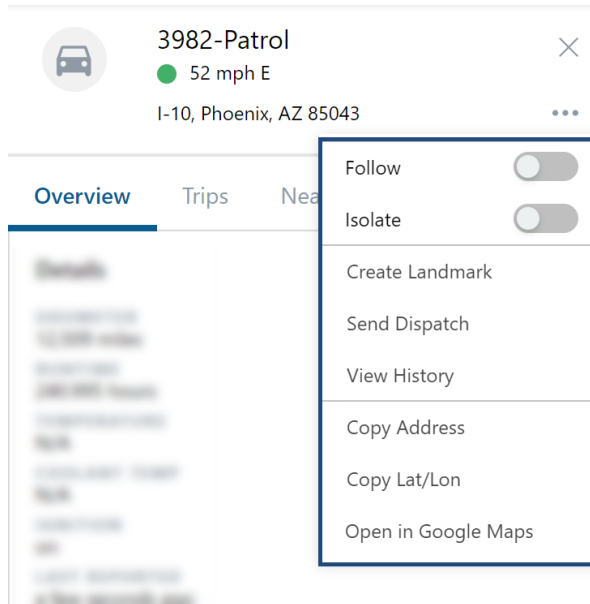

Using the Vehicle Card Status Bar


From the Status Bar, you can view a general overview of details pertaining to the selected vehicle, high-level details of the vehicle’s last trip, nearby assets and landmarks, and Hierarchy (Enterprise Only)/Group membership(s).

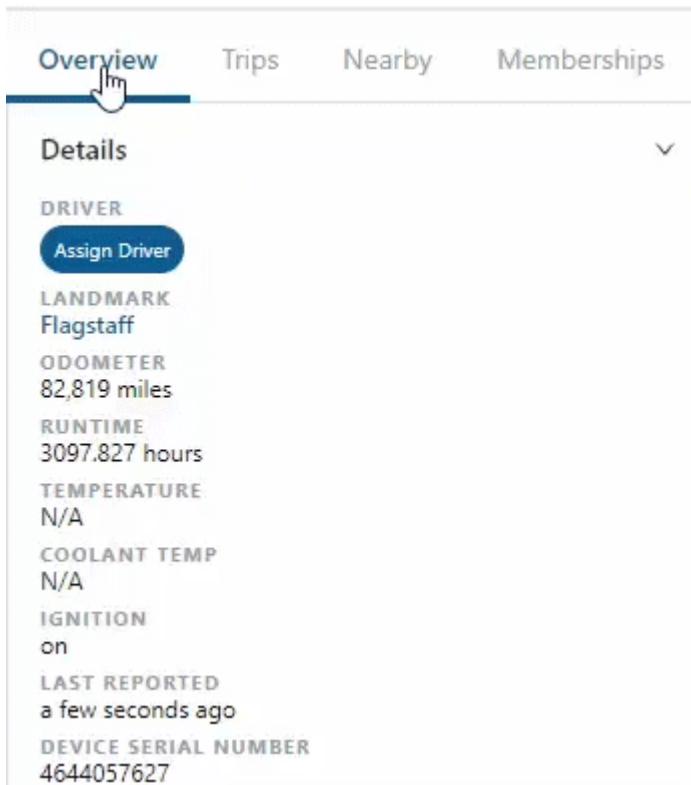

Viewing an Overview of Vehicle Details

The Overview tab of the Vehicle Card Status Bar gives you at-a-glance information about the selected vehicle including:

- Status
- Driver (if assigned)
- Landmark (if applicable)
- Odometer
- Runtime
- Temperature (if applicable)
- Coolant Temp (if applicable)
- Ignition
- Last Reported
- Device Serial Number
- Attributes (if applicable)
- Service (if applicable)
- Street View

**1-8002-03**
● 32 mph E
800 West Forest Meadows Street, Flagstaf...

Overview Trips Nearby Memberships

Details ▼

DRIVER
[Assign Driver](#)

LANDMARK
Rhett Test Landmark

ODOMETER
82,835 miles

RUNTIME
3097.827 hours

TEMPERATURE
N/A

COOLANT TEMP
N/A

IGNITION
on

LAST REPORTED
13 minutes ago

DEVICE SERIAL NUMBER
4644057627

Attributes

BOOM HEIGHT
100

VEHICLE TYPE
Golf Cart

TYPE OF VEHICLE
HD

Street View ▲

Assigning, Changing, or Removing a Driver

You can assign, change, or remove an assigned driver to a vehicle from the Overview section of the Vehicle Card.

► How to assign a driver:

1. From the Details section of the Vehicle Card, click **Assign Driver**.

The Assign Driver pop-up window appears.


2. Use the Searchable Select field by typing a driver's name in the field or use drop-down field to scroll down and click on a driver.



Note. You cannot create a driver within this Searchable Select field. Drivers must be created prior to using the field to appear in the available list of drivers. See [Adding a Driver](#) for step-by-step instructions.

3. Click **Assign**.

The driver is assigned to the vehicle.

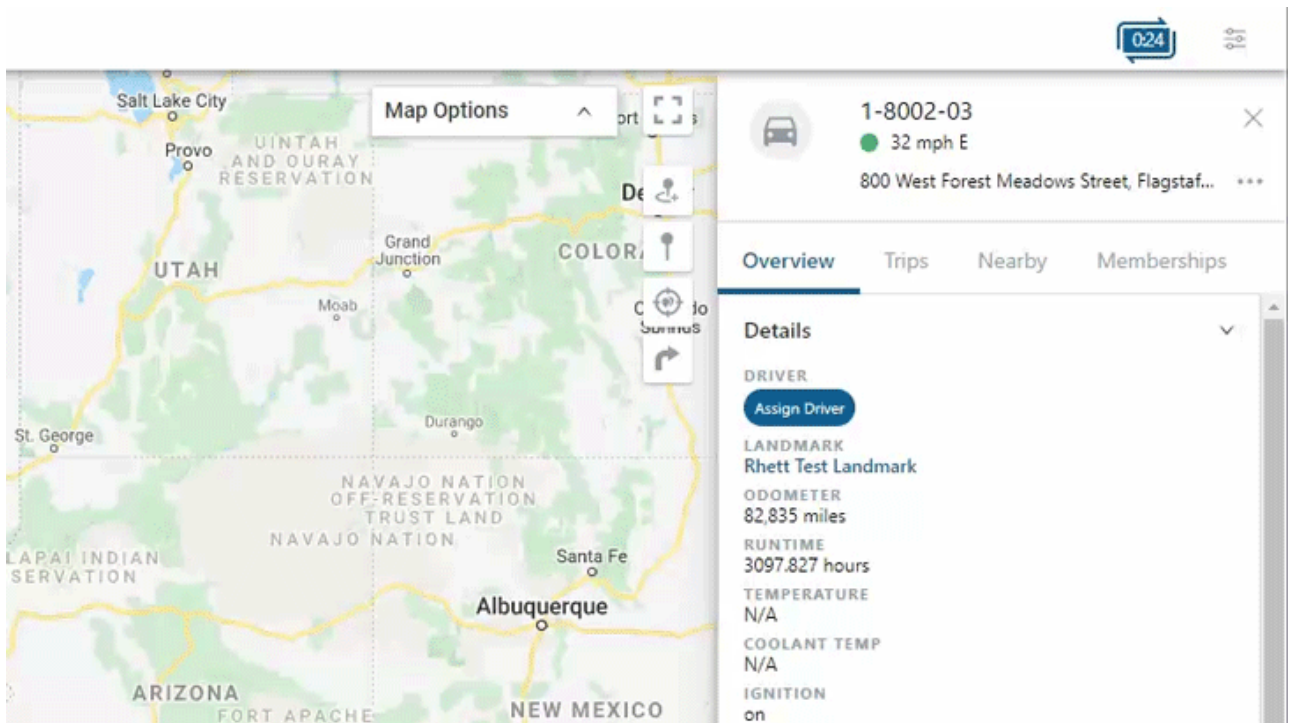

► How to change a driver:

1. From the Overview section of the Vehicle Card, click **Change** next to the current assigned driver's name.

The Assign Driver pop-up window appears.

2. Use the Searchable Select field by typing a driver's name in the field or use drop-down field to scroll down and click on a driver.



Note. You cannot create a driver within this Searchable Select field. Drivers must be created prior to using the field to appear in the available list of drivers. See [Adding a Driver](#) for step-by-step instructions.

3. Click **Assign**.

A pop-up asks you: "Are you sure you want to re-assign this vehicle's driver?"

4. Click **Yes, Assign** to proceed with the assignment change.



Note. You may cancel the assignment change by clicking **No, Cancel**.

The driver assigned to the vehicle is changed.

► How to remove an assigned driver:

1. From the Overview section of the Vehicle Card, click the Delete/Remove button (X) next to the current assigned driver's name.

The assigned driver is removed from the vehicle.


Using the Street View

You can use the Street View to view the vehicle's location on the map for street-level imagery.

► How to use the Street View:



1. From the Street View section of the Vehicle Card, click on the Expand button (^).

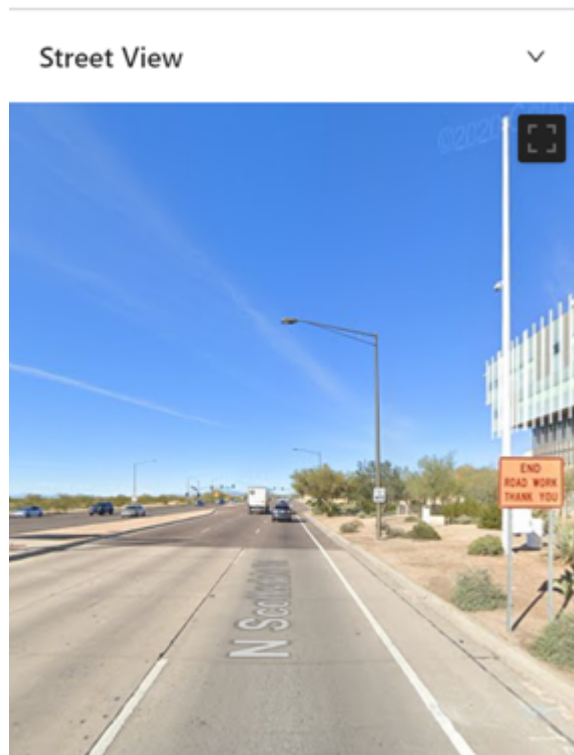The Street View section expands to show the street view of the vehicle's location.



Note. If Street View is unavailable for the location, a message is displayed stating: "Currently unavailable for this location".

Link: <https://help.gpsinsight.com/docs/about-the-map-page/available-map-cards/using-the-vehicle-card/> Last Updated: May 9th, 2019

2. To interact with the Street View, click on the screen to move the view up/down the street. To move the view, click and drag on the Street View screen. To zoom in or out, use the trackpad or trackball on your mouse.
3. To expand the Street View to Full Screen, click the **Toggle fullscreen view** button (). To exit Full Screen view, press the **Esc** button on your keyboard or click the **Exit full screen view** (.
4. To collapse the view, click the Collapse button.

Viewing the Most Recent Trip

You can view the most recent trip for the vehicle selected by clicking on **Trips** from the Status Bar. This option provides you with the most recent trip start (date and time), duration, average speed, distance traveled, and a 2D-map view with the trip's beginning and end locations and the vehicle's path identified.

Most Recent Trip

TRIP START

Jul 14 2020 2:27PM

DURATION

31min

AVERAGE SPEED

47 mph

DISTANCE


24 miles

[View full trip history](#)



Using the Nearby Lists

Nearby lists offer sorted lists of nearby assets and landmarks closest to the selected vehicle displaying by closest to farthest in miles. You may click on any of the listed assets/landmarks to view the corresponding Vehicle/Landmark Card.

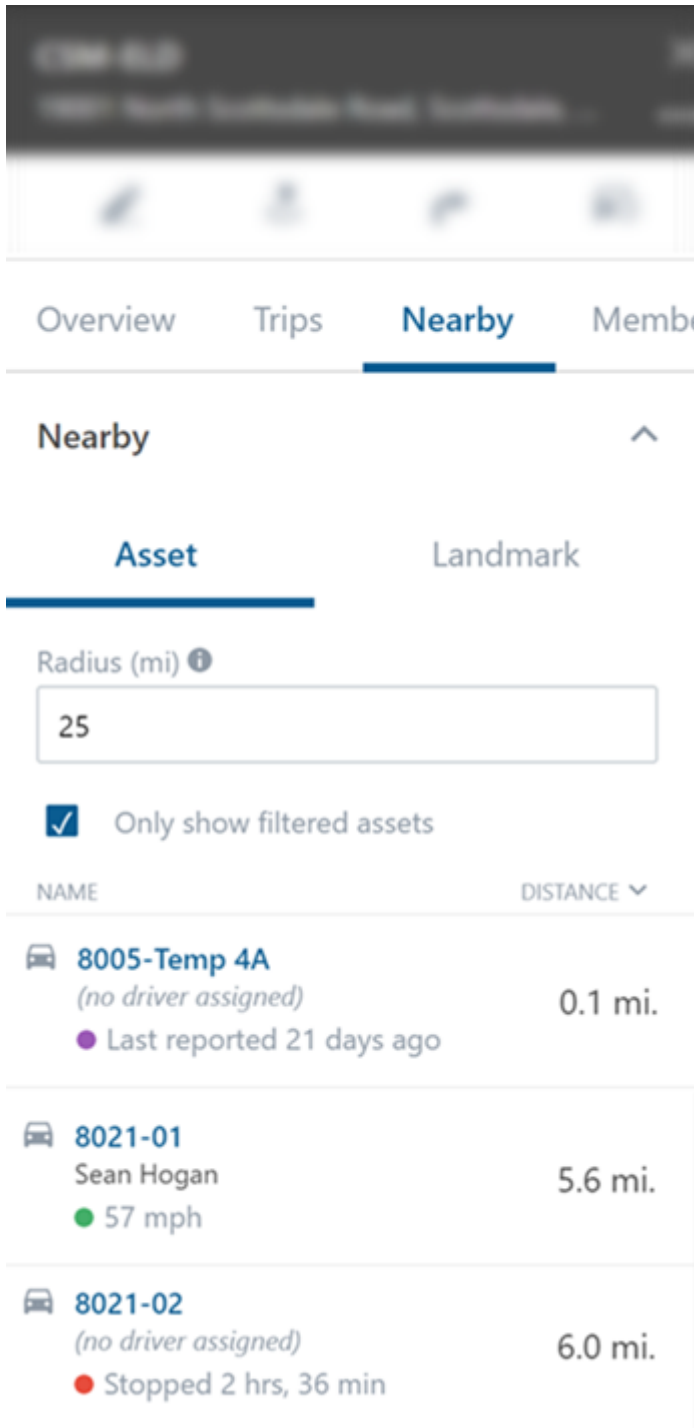

Overview Trips **Nearby** Members




Nearby ^

Asset Landmark

Radius (mi) ⓘ

25

Only show filtered assets

NAME	DISTANCE ▾
 8005-Temp 4A <i>(no driver assigned)</i> ● Last reported 21 days ago	0.1 mi.
 8021-01 Sean Hogan ● 57 mph	5.6 mi.
 8021-02 <i>(no driver assigned)</i> ● Stopped 2 hrs, 36 min	6.0 mi.



Note. This list can be especially useful if you are looking to dispatch one asset to another and would like to dispatch the closest appropriate asset possible. To do so, use the Send Dispatch function on the Vehicle Card and enter in the asset's Vehicle ID for "Location to Send" and the closest appropriate asset's Vehicle ID for "Send this location to the following recipient(s)" or vice versa, depending on your need. See the instructions under **Sending a Dispatch** for additional information.

Viewing Hierarchy (Enterprise only)/Vehicle Group Membership:

If the vehicle and/or driver is a member of a Hierarchy (Enterprise customers only) or Vehicle Group, the membership status is displayed under the Hierarchy Membership section and Vehicle Group Membership section for quick reference.

Hierarchy Membership

Company Vehicles > Development > **Security Team**

Cost Center_Tallahassee > **490302**

Vehicle Group Membership

ALL VEHICLES

KJ-Vehicles

Nationwide Assessment Vehicles

test11



Note. Hierarchy tree/branch membership is shown via breadcrumbs; whereas, vehicle group membership is shown via list.