


Link: <https://help.gpsinsight.com/docs/about-the-map-page/available-map-cards/using-the-vehicle-card/> Last Updated: May 9th, 2019

When you click on a vehicle/driver (if assigned) from the map or use the Search Field to locate a vehicle, the Vehicle Card for the selected vehicle/driver displays. With the Vehicle Card, you can see:

- Vehicle ID or name
- Driver (if associated/assigned)
- Address of last reported location
- Details (e.g., vehicle, status, driver, landmark, EV data – if applicable, odometer, runtime, voltage (if reported), and more)
- Attributes (if applicable)
- Camera events (if applicable)
- Street view of last reported location

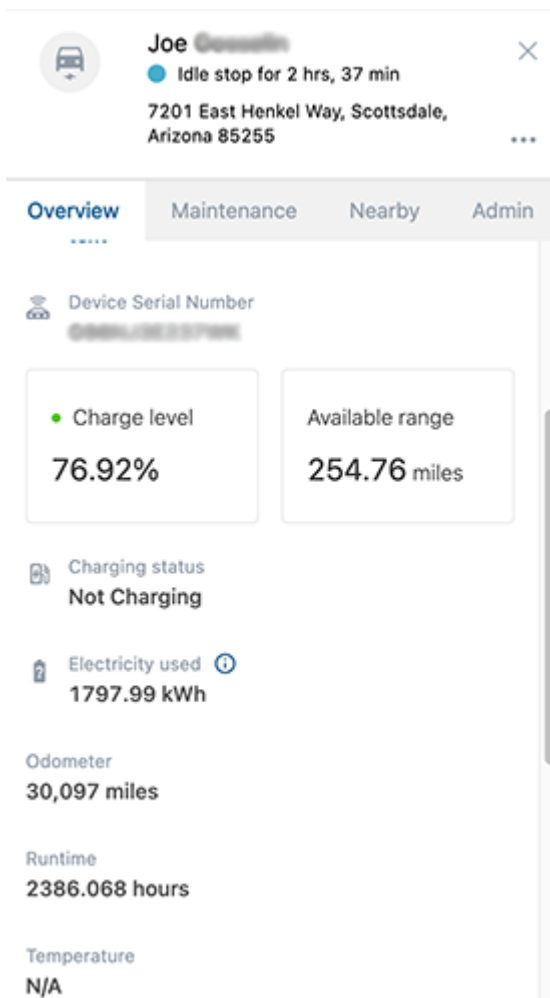

The screenshot shows a vehicle card for a vehicle named "Joe". The card has a header with a vehicle icon, the name "Joe", and a status "Idle stop for 2 hrs, 37 min". Below the header is the address "7201 East Henkel Way, Scottsdale, Arizona 85255". The card is divided into four tabs: "Overview", "Maintenance", "Nearby", and "Admin". The "Overview" tab is selected. Under the "Overview" tab, there is a "Device Serial Number" field with a blurred value. Below this are two boxes: "Charge level" showing "76.92%" and "Available range" showing "254.76 miles". Below these are three more fields: "Charging status" showing "Not Charging", "Electricity used" showing "1797.99 kWh", and "Odometer" showing "30,097 miles". At the bottom, there are two more fields: "Runtime" showing "2386.068 hours" and "Temperature" showing "N/A".

Joe Idle stop for 2 hrs, 37 min

7201 East Henkel Way, Scottsdale, Arizona 85255

Overview Maintenance Nearby Admin

Device Serial Number

Charge level: 76.92%

Available range: 254.76 miles

Charging status: Not Charging


Electricity used: 1797.99 kWh

Odometer: 30,097 miles

Runtime: 2386.068 hours

Temperature: N/A


Using the Vehicle Card Header and Vehicle Card Status Bar, you can quickly manage and monitor individual vehicles in your fleet.



Note. The Driver feature is available with the Driver Management add-on. If you would like to learn more, please contact your Account Manager.

Vehicle Card Header


Using the Vehicle Card Header of the Vehicle Card, you can edit, follow, and/or isolate a vehicle, create a landmark, send a message or dispatch, copy location data, and view trip history directly from the card.

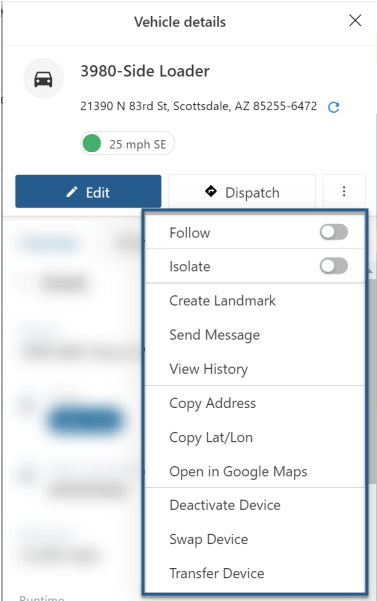

See [Vehicle Card Header](#) for step-by-step instructions on using the features available from the header.

Vehicle Card Status Bar

From the Status Bar, you can view a general overview of details pertaining to the selected vehicle, maintenance/service log information, nearby assets and landmarks, and Admin details.

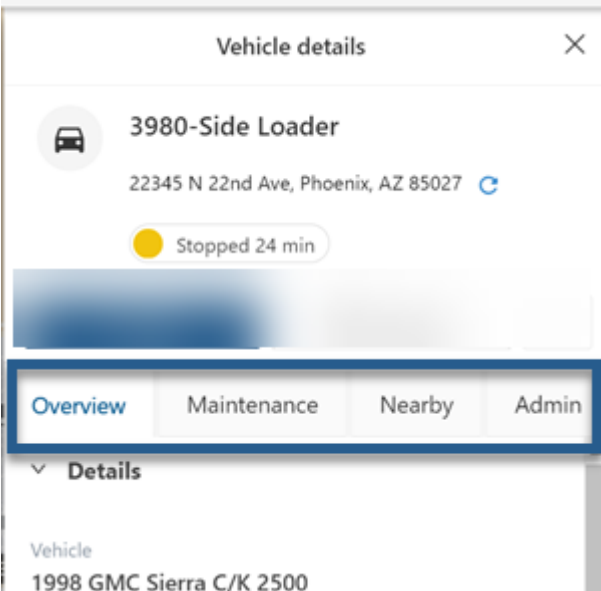

See **Vehicle Card Status Bar** for step-by-step instructions on using the features available from the status bar.