



Icon	Description
<b>1 - System Time</b>	The system date and time against which activity is logged.
<b>2 - Connection Icon</b>	Displays the status of the ELD's connectivity to the GPS hardware. (Green = Connection, Red = No connection)
<b>3 - Communication Icon</b>	Displays the status of the ELD's connectivity to the host software. (Green = Connection, Yellow = Communication is temporarily turned off (no data to send), Red = No connection)
<b>4 - GPS Icon</b>	Displays the status of the ELD's reception of GPS data. (Green = Data received, Yellow = Data received but unable to get a valid fix of the vehicle's location, Red = No data received.)
<b>5 - Trailer Icon</b>	Indicates that trailer information has not been entered into the logs.
<b>6 - Shipment Icon</b>	Indicates that shipment information has not been entered into the logs.
<b>7 - Version Number</b>	Displays the current software version. Tap to view Provisioning Information and System Check for troubleshooting purposes, which can be especially helpful when verifying ignition installation.