


ELD messaging is integrated with the Portal. This feature is available to **drivers who interact with the in-cab tablet display** as well as dispatchers who interact with the GPS Portal.

Messaging/Dispatching from the Portal


Using the Portal, you can send messages or dispatches to one or more drivers using the Driver Messaging interface. Dispatches are a type of message that include a physical address used to allow drivers to automatically receive turn-by-turn directions on their tablet displays.


► To send a message to one or more drivers:

1. From the **More** menu, expand **Messaging Integration**, click **Driver Messaging**, then click **Open**.

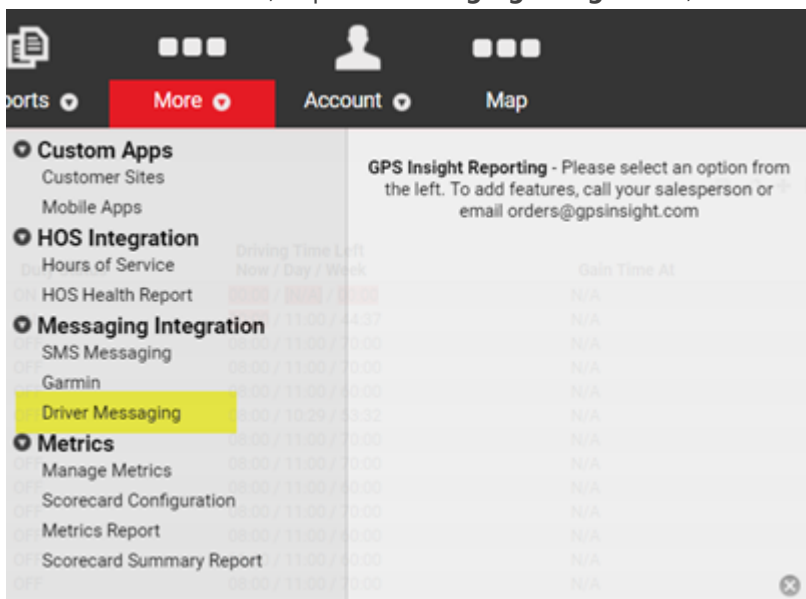


2. Locate the driver from the Drivers list. You can filter drivers by group or search for a driver by name or ID.

 **Note.** If you want to send to more than one driver, locate the **Send to multiple drivers** option (located in the Drivers list). Then check the checkbox next to the name of each driver you would like to receive the message.

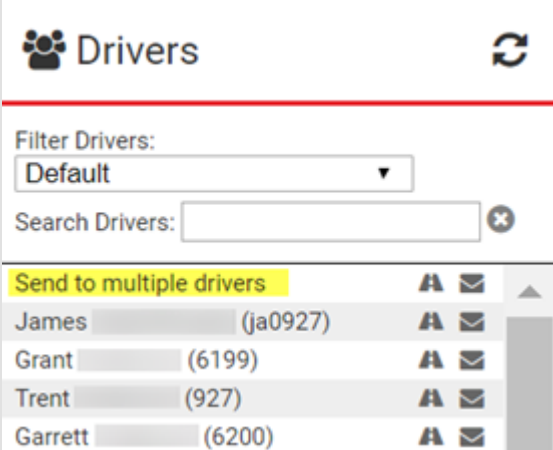


The screenshot shows the 'Drivers' list interface. At the top, there is a 'Filter Drivers:' dropdown menu set to 'Default' and a 'Search Drivers:' search box. Below the search box, there is a 'Send to multiple drivers' option highlighted in yellow. Underneath, a list of drivers is shown with checkboxes next to their names and IDs:


Driver Name	ID	Send to multiple drivers
James	(ja0927)	<input type="checkbox"/>
Grant	(6199)	<input type="checkbox"/>
Trent	(927)	<input type="checkbox"/>
Garrett	(6200)	<input type="checkbox"/>

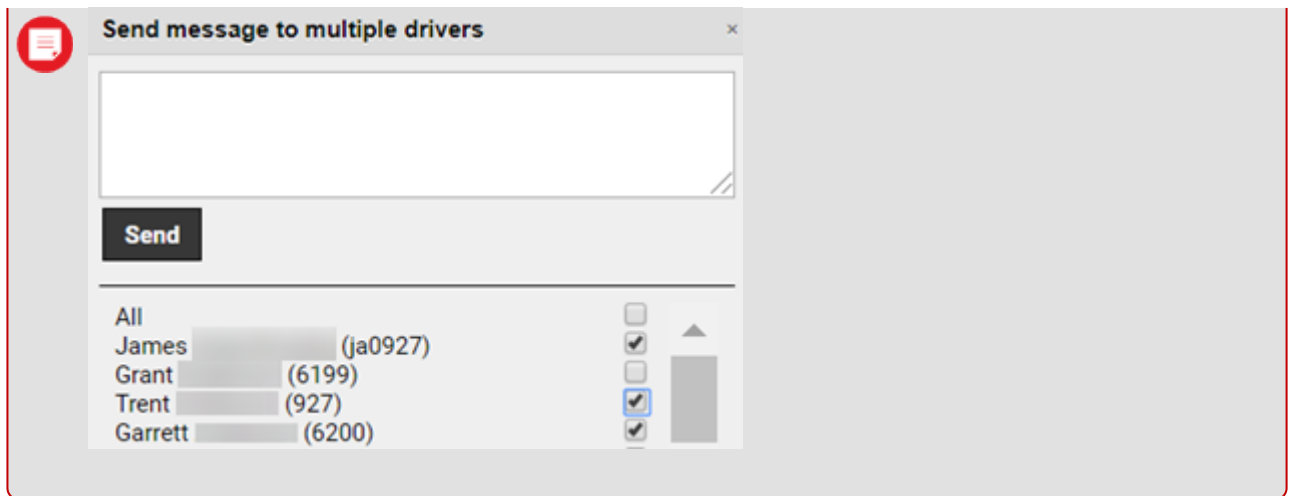


3. Tap the Message icon (✉) next to the driver or option you want.

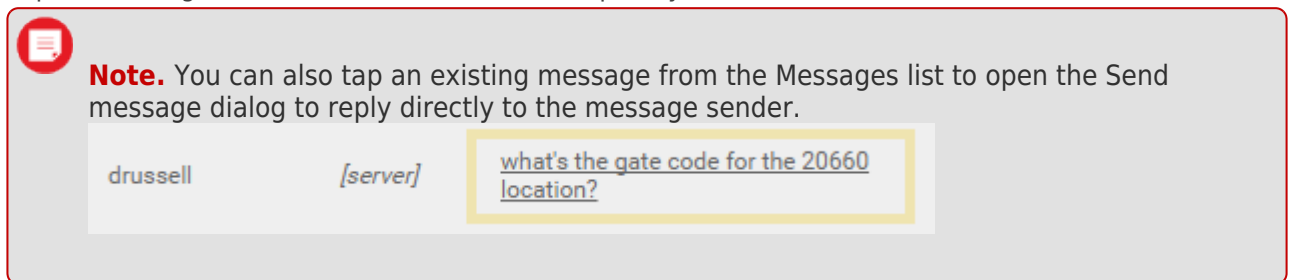

4. In the Send message dialog, type the message. (The message send limit is 256 characters.)
5. Click **Send**.

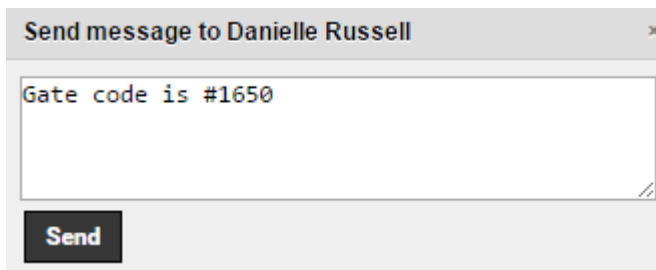

The driver(s) receives the message on the tablet device. (See [ELD Messaging from the Driver's perspective.](#)) Additionally, the sent message appears in the Messages list within the Portal.

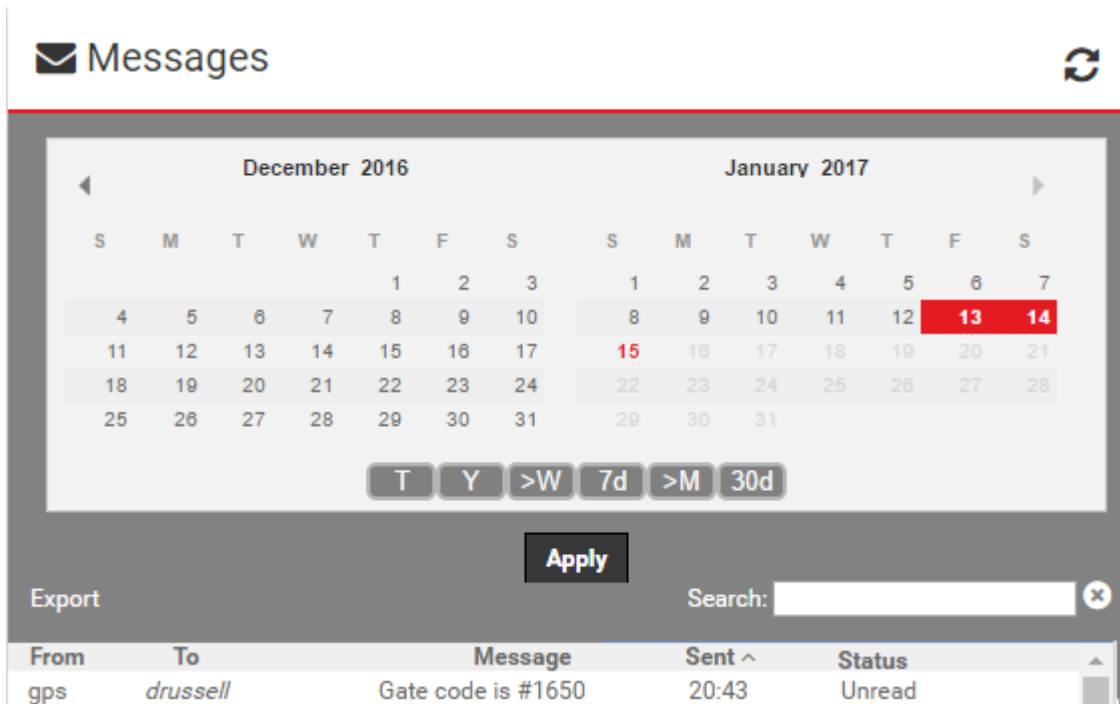


► To send a dispatch to one or more drivers:

1. From the **More** menu, expand **Messaging Integration**, and click **Driver Messaging**.
2. Locate the driver from the Drivers list. You can filter drivers by group or search for a driver by name or ID.



Note. If you want to send to more than one driver, locate the **Send to multiple drivers** option (located in the Drivers list).


3. Tap the **Dispatch** icon () next to the driver or option you want.
4. In the Send Dispatch dialog, enter an address and click **Go To**, or click on the map.
5. Enter an optional note, and click **Send Dispatch**.

Send dispatch to Danielle Russell

Address | Landmark

Enter an address or click on the map:

Map Satellite



Ethan
101 & S
7000 E I
Building
Phoenix
[View on](#)

101 & Scottsdale

Map data ©2017 Google Terms of Use

Address: 7000 E Mayo Blvd, Phoenix, AZ 85054, USA

Enter a note (optional):

The driver(s) receives the message on the tablet device. (See [ELD Messaging from the Driver's perspective](#).) Additionally, the sent message/dispatch appears in the Messages list within the Portal.

Using ELD Messaging (Dispatcher)

Link: <https://help.gpsinsight.com/docs/eld-focus-admin-reference/using-eld-messaging-dispatcher/> Last Updated: January 15th, 2017

Messages

December 2016 January 2017

S	M	T	W	T	F	S	S	M	T	W	T	F	S
				1	2	3	1	2	3	4	5	6	7
4	5	6	7	8	9	10	8	9	10	11	12	13	14
11	12	13	14	15	16	17	15	16	17	18	19	20	21
18	19	20	21	22	23	24	22	23	24	25	26	27	28
25	26	27	28	29	30	31	29	30	31				

T **Y** **>W** **7d** **>M** **30d**

Apply Search:

Export

From	To	Message	Sent ^	Status
gps	drussell	7000 E Mayo Blvd, Phoenix, AZ 85054 Pick up freight	20:34	Unread