

Link: <https://help.gpsinsight.com/installation-guide/driveri-hub-x/> Last Updated: October 20th, 2023

Please use the installation guide below.

Note. If you have an existing external camera integration:

External cameras will need to be an analog camera capable of being adapted to the GX12 4 pin Aviation connector. The DriveriHub device supports 480, 720, and 1080.

If you would like to download a copy, use the download icon in the PDF viewer above or click this link:

[DriveriHub Installation Guide.](#)

Identifying Camera Install Locations

External cameras are shipped with model numbers and SKU on the boxes and the cameras are also labeled with model numbers.



To determine whether a camera is intended to be installed on the right side, left side, inside, or rear of the asset, please use the table below.

Link: <https://help.gpsinsight.com/installation-guide/driveri-hub-x/> Last Updated: October 20th, 2023

Camera Install Location	Model Number	SKU
Left Side Camera	FL-750L	SKU NDSQ720PL
Right Side Camera	FL-750R	NDSQ720PR
Rear Facing Camera	FL-750	SKU NDSQ720PC
Inside "Round" Camera	FL-MC-001	SKU NDR720PA