

**Note.** For best results, register this device type as an Asset. If registered as a Vehicle, trip data accuracy may be impacted due to the lack of a direct ignition connection.

## Before You Begin

The installation kit contains a registration card, the ST-600 series device, 2 well nuts with screws, and two self-tapping screws.

Additional tools and supplies you may need include a fine-tip marker, centerpunch, and a ladder.

For device activation and registration, obtain the Install Key from your GPS Administrator and bookmark the Verify GPS Web App (<https://verifygps.gpsinsight.com>) on your smartphone.

## Installation Overview

The following steps provide an overview of the installation process:

1. Install Preparation.
2. Device Mounting.
3. Activation and Registration

## Installation Steps

### 1. Installation Preparation.

1. Complete the registration card by locating the 19-digit serial number.



2. Identify a suitable mounting location that is horizontal to the ground, has an unobstructed view of the sky, is not a removable panel, and will not be damaged during normal operation of the asset.




**Note. Covert Installation:** Though the device may report accurately in covertly installed locations, we do not recommend this type of installation due to the potential for lost data and/or diminished battery life.

2. Inspect the area directly beneath the mounting location to ensure nothing will be damaged during installation.

## 1. **2. Device Mounting.**

1. Position the mounting bracket and mark the position of the two holes.
2. Secure the device to the asset with screws.


**Note.** Please **DO NOT** cover the device's humidity sensor with adhesive during device mounting (see image below).

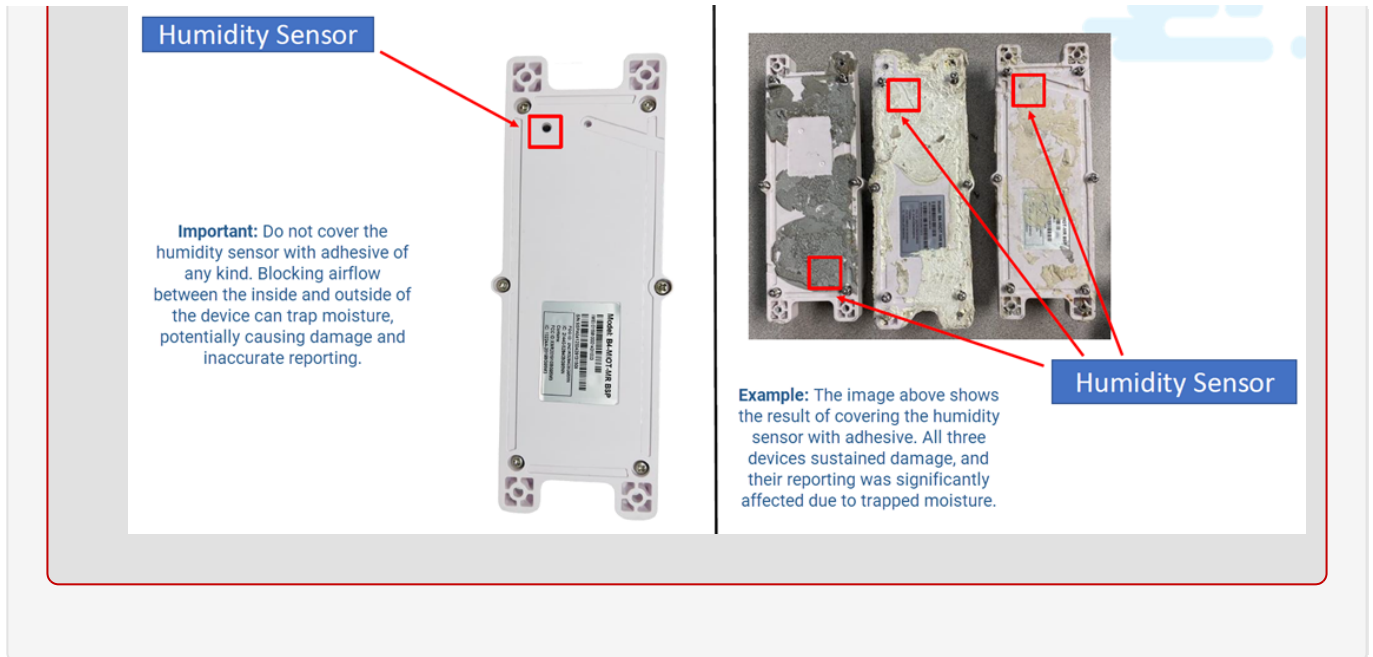

## 2. 3. Activation and Registration.

1. Open the [GPS Insight VerifyGPS Web App](#) via your smartphone or computer, then enter following information and follow the prompts to register the device.
  - Enter your Install Key.
  - Enter the Device Serial Number.
  - Select Device Type: ST-600.
  - Click 'Next' and follow the prompts to verify and register the device.

**Note.** Device will not appear on the map initially. It takes ~6 hours of direct sunlight to start reporting and ~60 hours of sunlight to fully charge the battery.

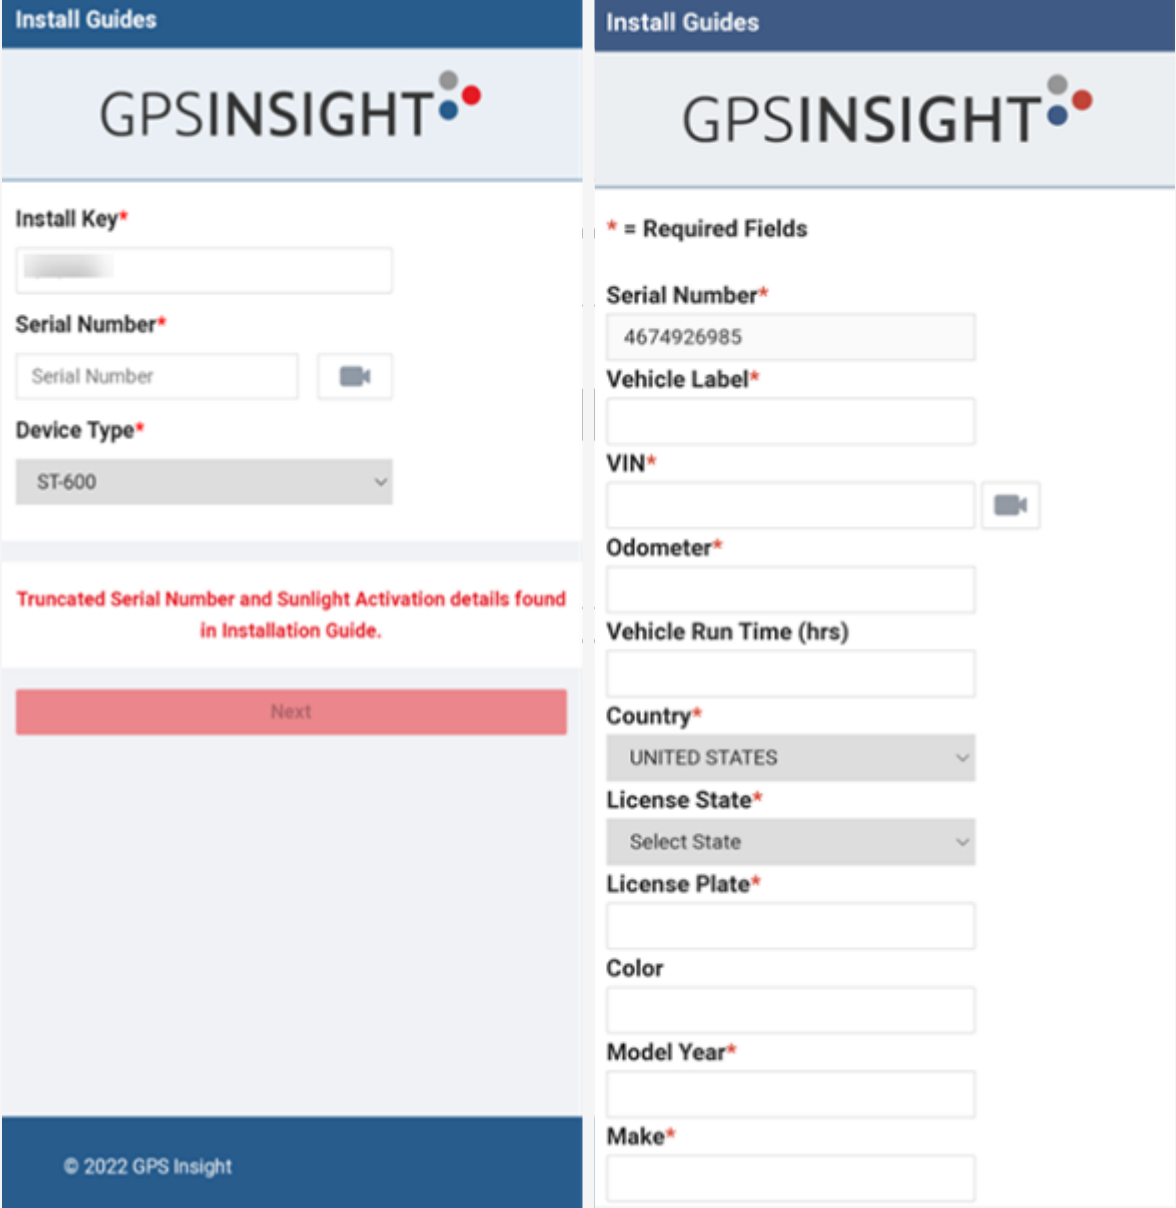

**Install Guides**

## GPSINSIGHT

**Install Key\***

**Serial Number\***

**Device Type\***

ST-600

**Truncated Serial Number and Sunlight Activation details found in Installation Guide.**

**Next**

© 2022 GPS Insight

**Install Guides**

## GPSINSIGHT

**\* = Required Fields**

**Serial Number\***

**Vehicle Label\***

**VIN\***

**Odometer\***

**Vehicle Run Time (hrs)**

**Country\***

UNITED STATES

**License State\***

Select State

**License Plate\***

**Color**

**Model Year\***

**Make\***

- Upon successful registration, give the registration card to your GPS administrator.